

INSTALLATION & OPERATION GUIDE

Please the installation guide before use

Purpose & Intended Use

This is for supporting and stabilising compatible sprinkler risers in portable irrigation systems.

Installation Procedure

1. Confirm the base size is compatible with the sprinkler riser assembly.
2. Place the clamp at the base of the riser and position the riser vertically.
3. Seat the foot firmly in the ground so the base remains stable.
4. Introduce water gradually and check the riser alignment.
5. Re-seat the base if the riser begins to lean as the soil softens.
6. Shut off the supply before moving or repositioning the sprinkler assembly.

Operating Checks

- Confirm all connections are secure before normal operation.
- Introduce water or system pressure gradually and inspect for leakage, movement or abnormal operation.
- Follow the product-specific operating limits stated in the corresponding Technical Data Sheet.
- Stop the system and depressurise it before adjustment, dismantling or servicing.

Maintenance & Storage

Inspect periodically for visible damage, wear, blockage, deformation or loose connections. Clean or replace components when required. Drain and store flexible products carefully when not in use.

Safety Precautions

Do not work on a pressurised system. Use suitable tools and appropriate personal protective equipment. Follow site-specific safety procedures.

Redyplast — Made in India