



INSTALLATION & OPERATION GUIDE

Please the installation guide before use

Purpose & Intended Use

This is for supporting and stabilising compatible sprinkler risers in portable irrigation systems.

Installation Procedure

1. Confirm the clamp size and configuration match the sprinkler assembly.
2. Position the clamp correctly around the intended connection.
3. Engage the latch fully and verify that it is secure.
4. Check the assembly before introducing water.
5. Inspect for movement or loosening during operation.
6. Shut off and depressurise the system before releasing or repositioning the clamp; inspect the spring on spring-equipped variants.

Operating Checks

- Confirm all connections are secure before normal operation.
- Introduce water or system pressure gradually and inspect for leakage, movement or abnormal operation.
- Follow the product-specific operating limits stated in the corresponding Technical Data Sheet.
- Stop the system and depressurise it before adjustment, dismantling or servicing.

Maintenance & Storage

Inspect periodically for visible damage, wear, blockage, deformation or loose connections. Clean or replace components when required. Drain and store flexible products carefully when not in use.

Safety Precautions

Do not work on a pressurised system. Use suitable tools and appropriate personal protective equipment. Follow site-specific safety procedures.

Redyplast — Made in India