



INSTALLATION & OPERATION GUIDE

Please the installation guide before use

Purpose & Intended Use

This washer is designed to provide a sealing interface in compatible threaded connections for sprinklers and risers.

Installation Procedure

1. Select the washer size that matches the compatible threaded connection.
2. Clean the washer and mating faces before assembly.
3. Place the washer correctly on the mating face.
4. Start the threaded connection carefully and tighten moderately.
5. Avoid excessive tightening that could deform the washer or damage mating components.
6. Check the joint before operation and replace the washer if damaged or deformed during servicing.

Operating Checks

- Confirm all connections are secure before normal operation.
- Introduce water or system pressure gradually and inspect for leakage, movement or abnormal operation.
- Follow the product-specific operating limits stated in the corresponding Technical Data Sheet.
- Stop the system and depressurise it before adjustment, dismantling or servicing.

Maintenance & Storage

Inspect periodically for visible damage, wear, blockage, deformation or loose connections. Clean or replace components when required. Drain and store flexible products carefully when not in use.

Safety Precautions

Do not work on a pressurised system. Use suitable tools and appropriate personal protective equipment. Follow site-specific safety procedures.

Redyplast — Made in India